
414115300


EPSON
EXCEED YOUR VISION


ELPWP10

Quick Start Guide

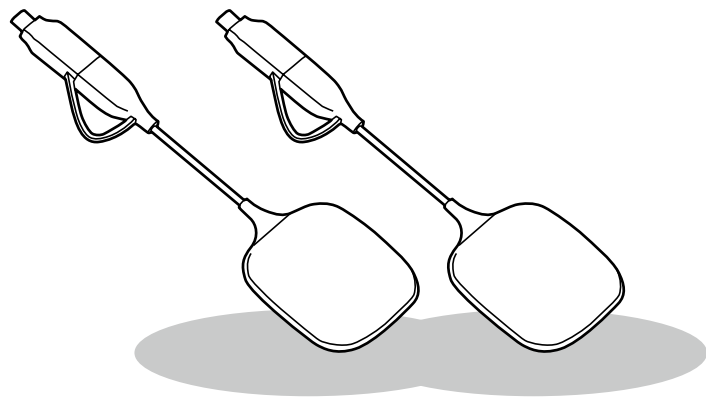

ELPWT01 x 2

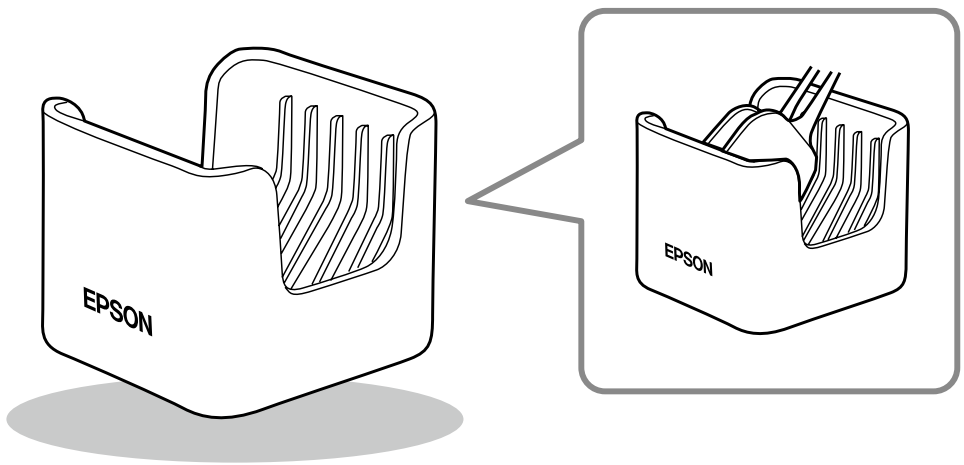


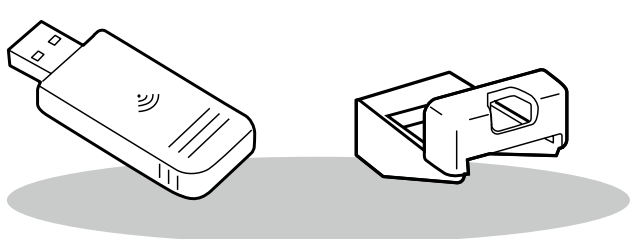



ELPAP11


ELPAP11 User's Guide

Pairing

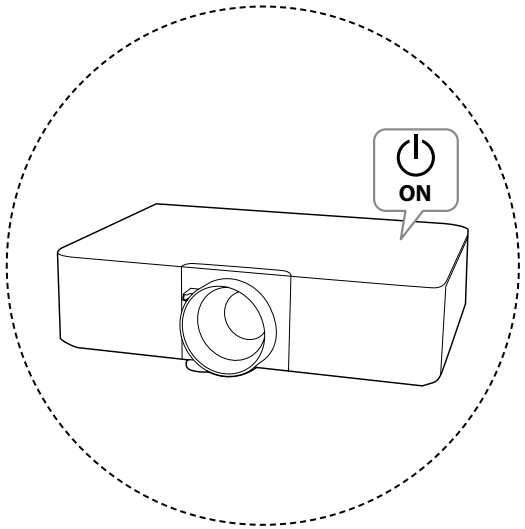


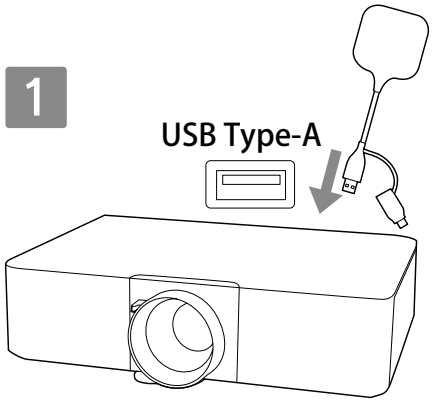

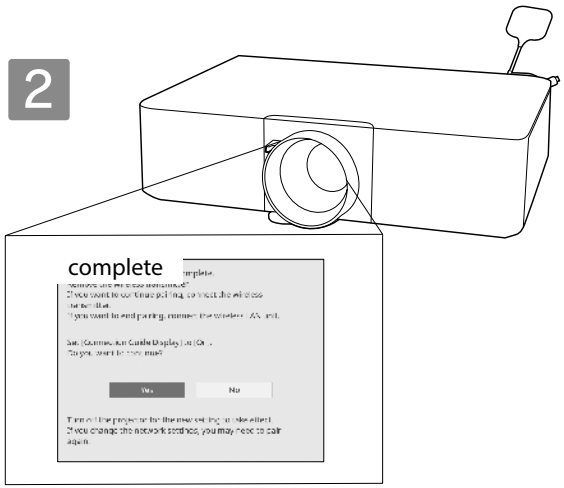

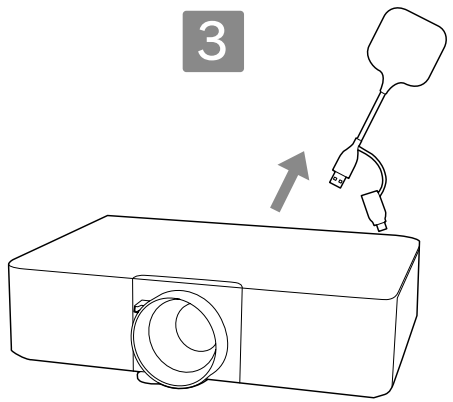


EN	• Before pairing, make network settings for the projector. • Epson Wireless Transmitter Settings allows you to perform pairing on your computer. For more details, see the “Epson Wireless Transmitter Settings Operation Guide”.
FR	• Avant l’appairage, définissez les paramètres réseau du projecteur. • Epson Wireless Transmitter Settings vous permet d’effectuer l’appairage sur votre ordinateur. Pour plus de détails, consultez le « Guide d'utilisation Epson Wireless Transmitter Settings ».
DE	• Konfigurieren Sie vor der Kopplung die Netzwerkeinstellungen für den Projektor. • Epson Wireless Transmitter Settings ermöglicht Ihnen die Kopplung an Ihrem Computer. Weitere Einzelheiten finden Sie in der „Bedienungsanleitung zu Epson Wireless Transmitter Settings“.
ES	• Antes de realizar la asociación, realice los ajustes de red del proyector. • Epson Wireless Transmitter Settings le permite realizar la asociación en el equipo. Para obtener detalles, consulte la "Guía de funcionamiento de Epson Wireless Transmitter Settings".
IT	• Prima di eseguire l'abbinamento, configurare le impostazioni di rete del proiettore. • Epson Wireless Transmitter Settings consente di eseguire l'abbinamento sul computer. Per maggiori dettagli, consultare la “Guida operativa di Epson Wireless Transmitter Settings”.
PT	• Antes de emparelhar, configure as definições de rede do projetor. • O Epson Wireless Transmitter Settings permite-lhe executar o emparelhamento no seu computador. Para mais detalhes, consulte o “Manual de funcionamento do Epson Wireless Transmitter Settings”.
TC	• 配對前，請為投影機進行網路設定。 • Epson Wireless Transmitter Settings 可讓您在電腦上執行配對。如需更詳細的資訊，請參閱「Epson Wireless Transmitter Settings 操作說明書」。
KO	• 페어링하기 전에 프로젝터의 네트워크를 설정합니다 . • Epson Wireless Transmitter Settings 에서는 컴퓨터에서의 페어링을 수행할 수 있습니다 . 자세한 내용은 “Epson Wireless Transmitter Settings 작동 가이드” 를 참조하십시오 .
JA	• ペアリングする前に、プロジェクターのネットワーク設定を行ってください。 • Epson Wireless Transmitter Settings を使うと、コンピューターでペアリングが可能です。詳細は『Epson Wireless Transmitter Settings 操作ガイド』でご確認ください。

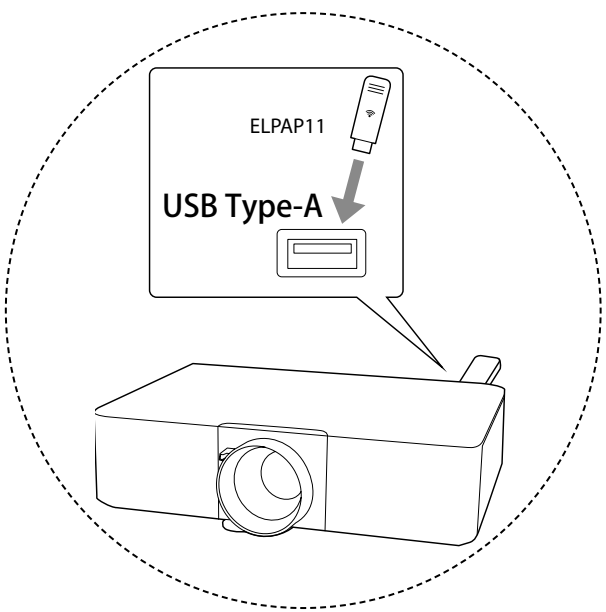


Projecting


1

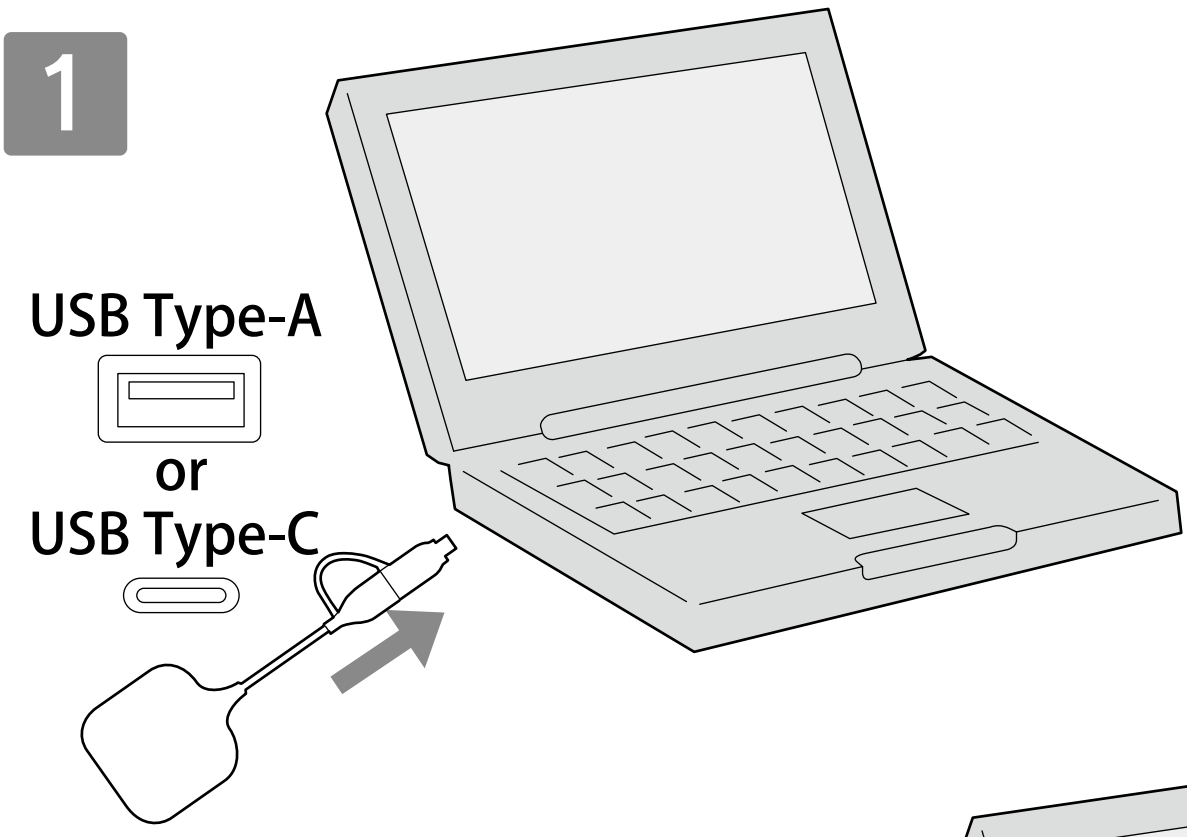


2

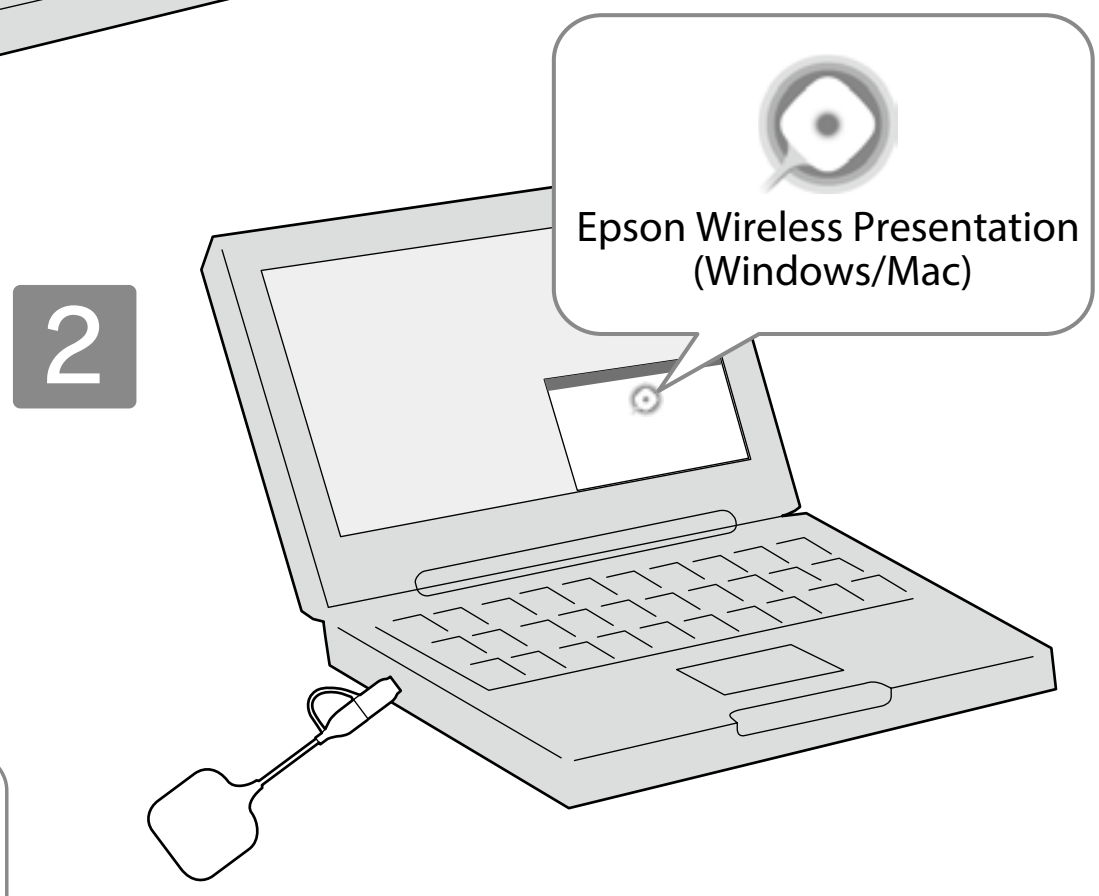

3

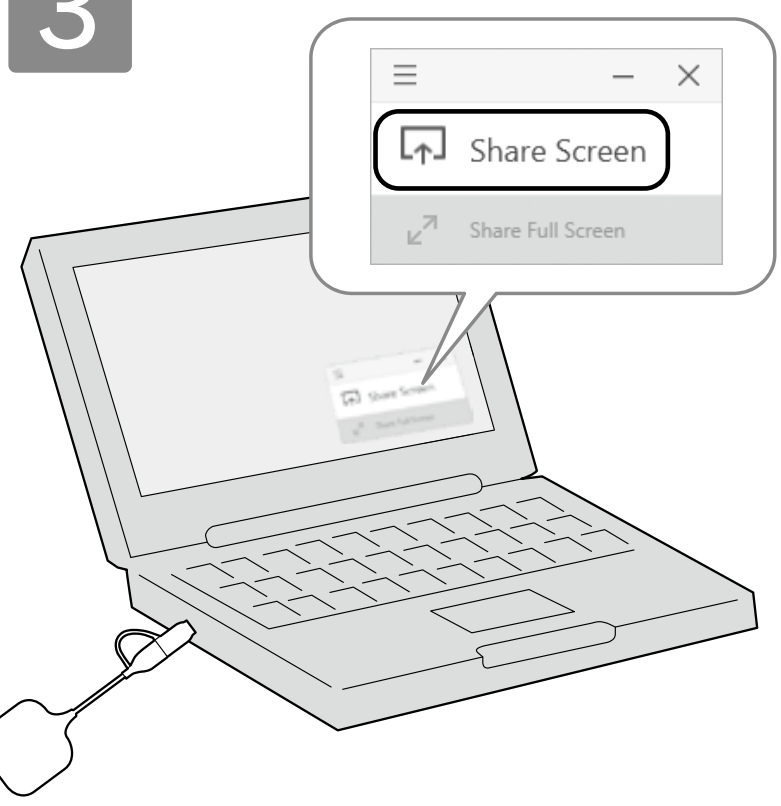



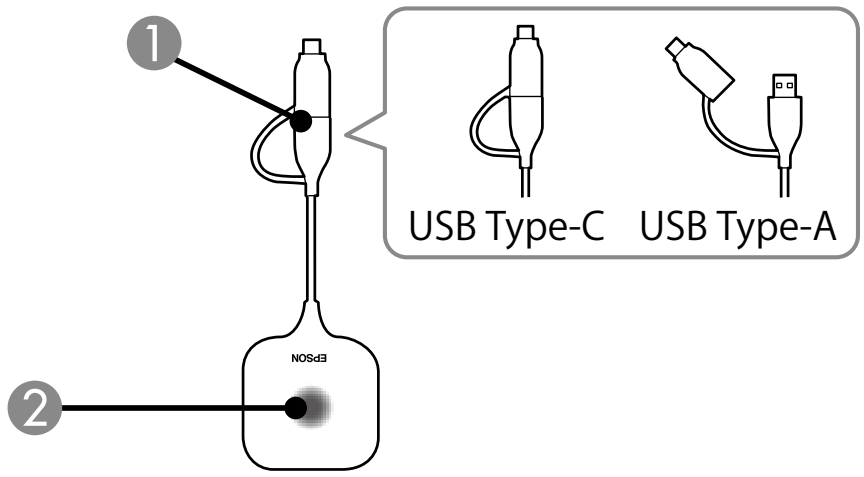

EN

epson.sn

About This Guide

This guide explains how to use the Wireless Presentation System ELPWP10.
For details on how to use the system, use the QR code on the right to access our website to see the "Epson Wireless Presentation System User's Guide".

Safety Instructions

⚠ Warning
May be a source of electromagnetic interference to cardiac pacemakers and cause them to malfunction. Before using this unit, check that there is no one in the vicinity using a cardiac pacemaker.
May be a source of electromagnetic interference to sensitive medical equipment and cause them to malfunction. Before using this unit, check that there is no sensitive medical equipment in the vicinity.
May be a source of electromagnetic interference and cause malfunctions or accidents to occur. Do not use this unit near automatically controlled equipment such as automatic doors or fire alarms.
Do not attempt to disassemble or remodel this transmitter (ELPWT01).

ELPWT01 Specifications

Item	Specifications
Power Consumption	5 VDC / 0.5 A
Operating Temperature	0 to +40°C (Humidity of 20 to 80%, No condensation)
Storage Temperature	-20 to +70°C (Humidity of 0 to 95%, No condensation)
Operating Altitude	0 to 3,000 m
Dimensions	Width 63.5 x Height 11 x Depth 175 mm (excluding USB conversion adapter)
Weight	Approx. 53 g

Product Parts and Functions

① USB terminal	② Indicator		
Connects to your computer's USB port. You can use this in two ways: with the USB conversion adapter (USB-C) or without (USB-A). When pairing on a projector, connect it to the USB-A port.		Flashing blue quickly	The wireless transmitter is connected to your computer and is waiting for the Epson Wireless Presentation software to launch.
		Lit blue	The Epson Wireless Presentation software is running.
		Flashing blue slowly	Projecting the computer's screen.
		Lit orange	An error has occurred. Close the Epson Wireless Presentation software, and then disconnect the wireless transmitter from your computer.

Indication of the manufacturer and the importer in accordance with requirements of EU directive

Manufacturer: SEIKO EPSON CORPORATION
Address: 3-5, Owa 3-chome, Suwa-shi, Nagano-ken 392-8502 Japan
Telephone: 81-266-52-3131
http://www.epson.com/

Importer: EPSON EUROPE B.V.
Address: Atlas Arena, Asia Building, Hoogoorddreef 5,1101 BA Amsterdam
Zuidoost
The Netherlands
Telephone: 31-20-314-5000
http://www.epson.eu/